


External Connections

BATT (12V) = Connection to car battery
IGN (12V) = Connection to ignition switch
USB_PWR (12V) = Connection to USB buck convertor
Poweroff (3V3) = Connection to RPi output set for gpio_poweroff
Shutdown (3V3) = Connection to RPi input set for gpio_shutdown

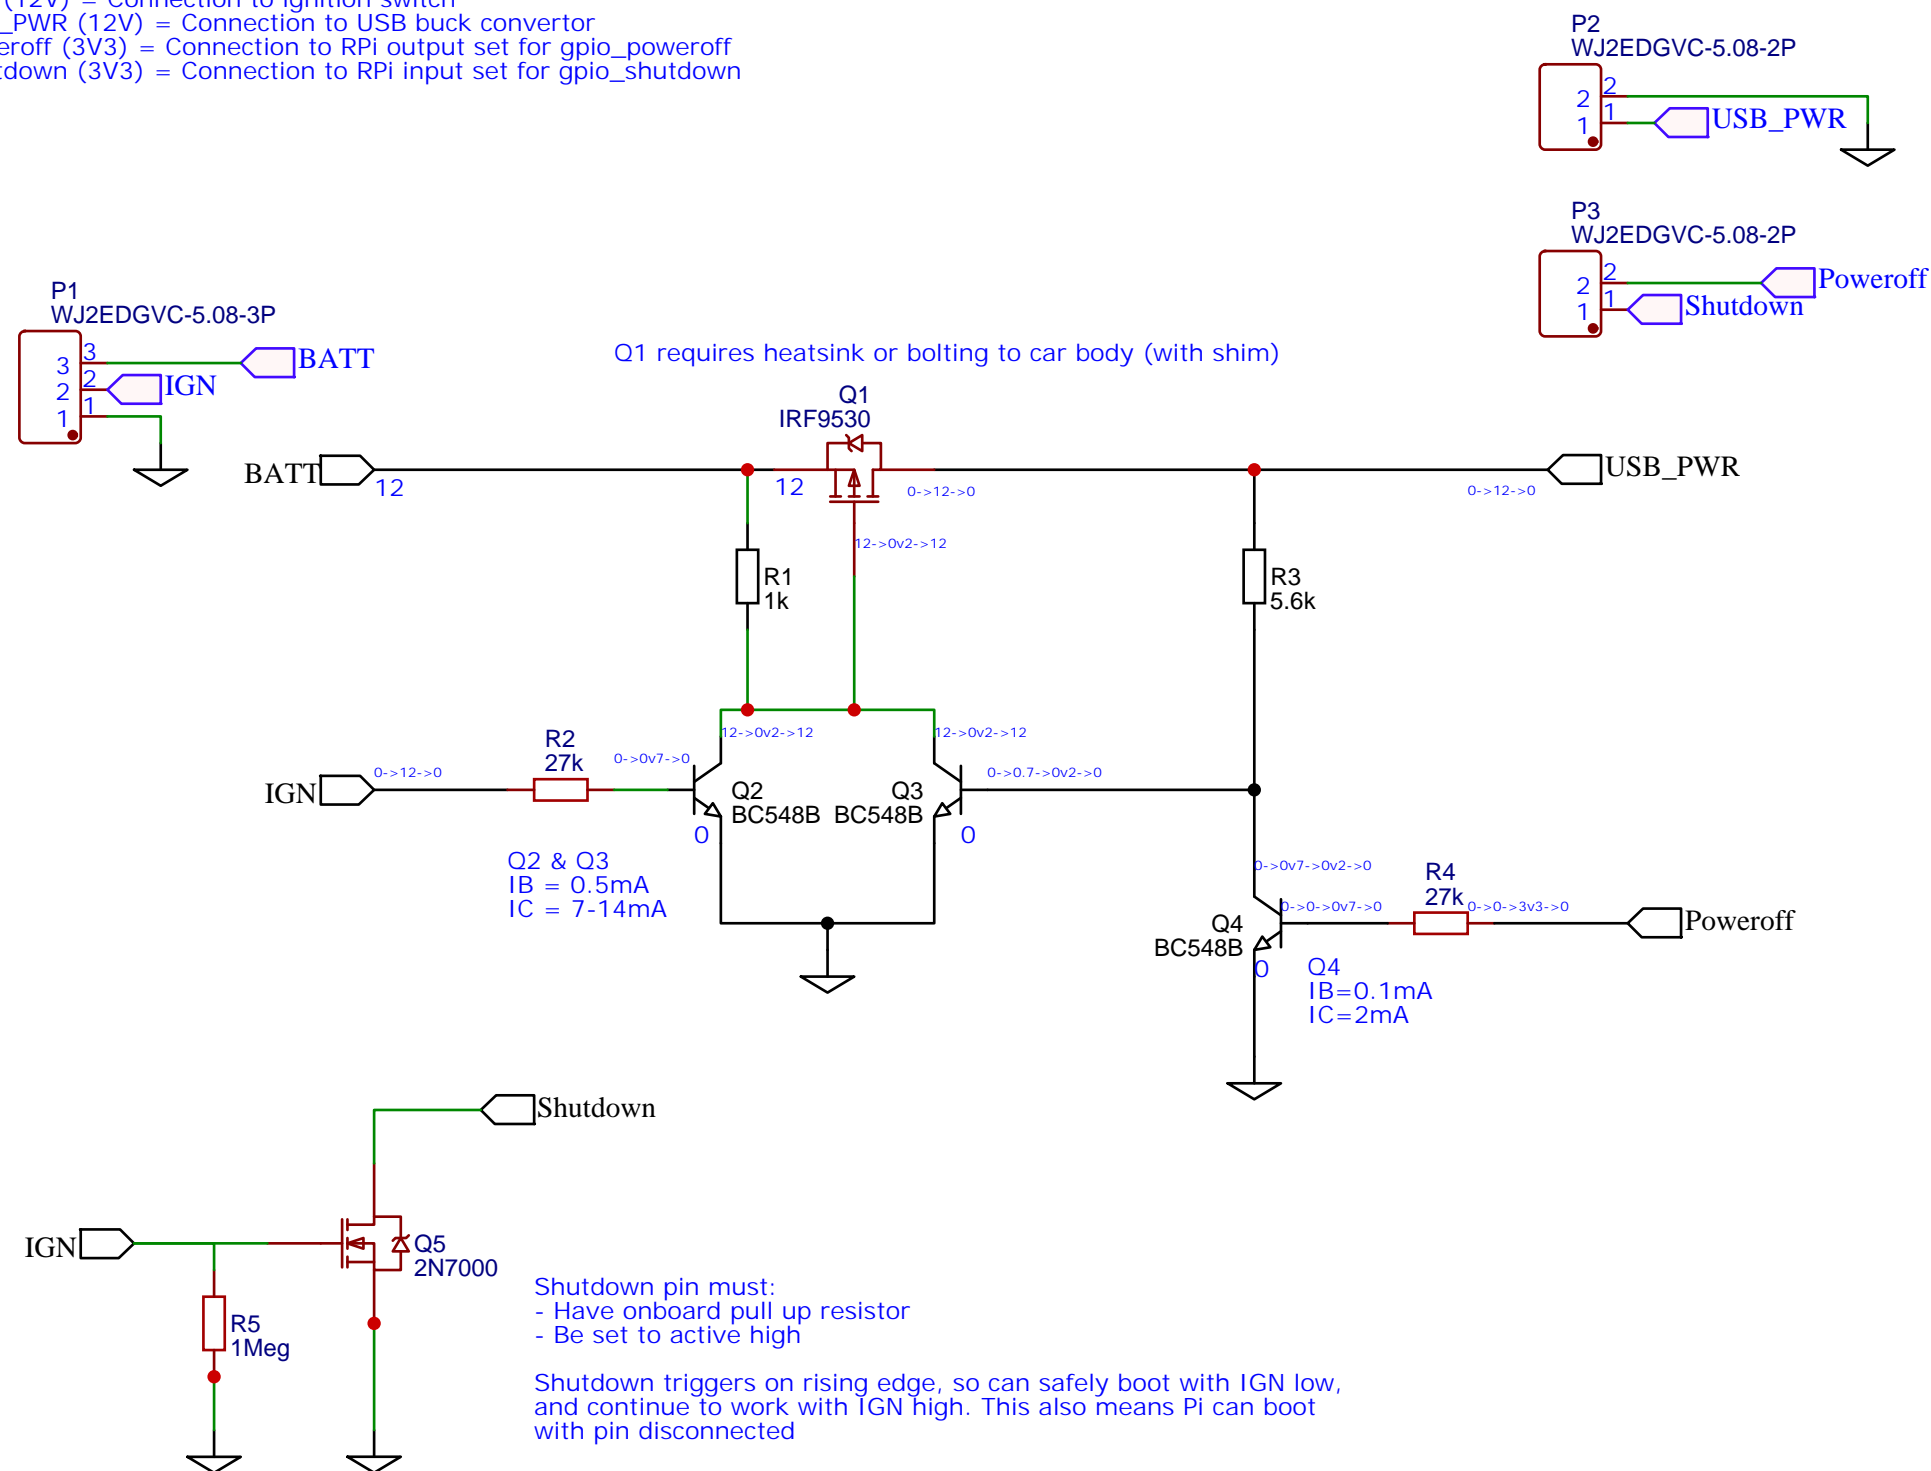

TITLE: Raspberry Pi Car PSU			REV: 2.0
Date: 2017-10-06		Sheet: 1/1	
EasyEDA V4.9.3		Drawn By: neilneil2000	